



OM5® assembly instructions

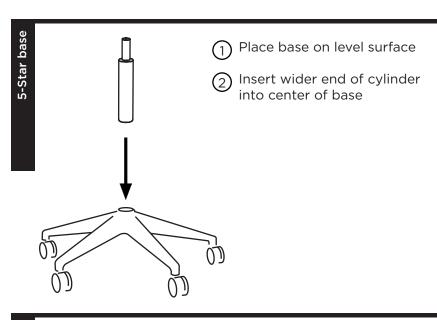

For Task Stools with a Turn-Lock only, position footring as illustrated and slide down onto cylinder. Tighten handwheel to secure.

*If footring has no handwheel, twist the entire footring clockwise to secure.

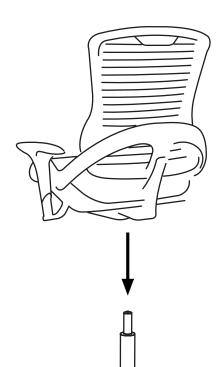

final assembly steps

- Lower chair top snugly onto cylinder
- (5) Activate cylinder to its lowest point
- (6) Sit in seat to engage chair top and mechanism connection
- Carefully square your body weight onto the chair top to fully secure into cylinder and base

